



The word **FIL** will scroll across the display during the fill and heat process.

When complete, a temperature will display in the screen

Press the on/off switch once.



Open the hood. Place the rack of items to be washed in the unit. Close the hood.



Press a button for the wash cycle you need. When complete, the word **End** will appear and the unit will beep.

## HOW TO RUN A CLEAN CYCLE AND TAKE APART AND CLEAN YOUR HOOD TYPE DISHWASHER

### STEP 1 Take apart



Open the hood and remove the dishrack (if there is one).



Lift up the tray rack



### STEP 2 Take apart



Remove the strainer pan.



Remove the overflow pipe.

### STEP 3 Clean cycle



Close the hood and **press the drain cycle button once**



The **Clean message CLE** will be displayed throughout the drain cycle (which runs approximately for 5 minutes).

The word **End** will display when the cycle is over and the machine will beep. **You can now open the hood.**

### STEP 4 Take apart



Remove the tray rack and wash.



Lift up and remove the wash pump filter.

### STEP 5 Take apart



Unscrew the lower rinse arm. Remove and clean it.



Lift the lower wash arm. Remove and clean.



Unscrew the upper rinse arm.



Remove the upper wash arm. This will drop down when you remove the rinse arm. Clean it.

### STEP 6 Manual cleaning



If not done already, clean and wash all removed parts. You are now ready to reassemble.

### STEP 7 Manual cleaning



Clean out any residue left in the tank. Wash down all walls and surface areas.



Press the on/off switch once.

### STEP 8 Reassemble



Put back the upper wash and rinse arms. Tighten gently.



Put back the lower wash and rinse arms. Tighten gently.



Put back the wash pump filter.



Put back the overflow pipe.



Put back the strainer pan.



Put back the tray rack.



Now the unit is ready to operate or to switch off..